

EFFECTS II QUICK REFERENCE CARD

THE MAIN MENU

- Selections 1-8 — Select Operating Menus
- Selection 9 — Select Board Slot (0-7)
- <Ctrl B> — Quick-Load Soundbase 1-3 (Same for all Menus)*

MENU 1: SOUND SAMPLES

- Selection 1 — Return to Main Menu
- Selections 2-9 — Select and Play Demo Routines
- Selection A — Enter New Volume (0-15)
- Selection B — Enter New Mode (2-7)

MENU 2: PRESET RHYTHMS

- Selections A-L — Select and Play Rhythms
- Selection 1 — Return to Main Menu
- Selection 2 — Enter New Volume (0-15)
- Selection 3 — Enter New Mode (2-7)
- Selection 4 — Enter New Tempo (0-15)
- Selection 5 — Enter New Pitch (1-100)
- <- -> — Change Sound Direction

MENU 3: REAL TIME REC/PLAY

- Selection 1 — Return to Main Menu
- Selections 2-7 — Select a New Mode (2-7)
- Key Paris AS, DF, GH, Etc. — Play Sounds According to Mode Selected
- Selection 8 — Enter New Volume (0-15)
- Selection 9 — Enter New Record Rate (1-255)
- Selection Q — Enter New Pitch (1-100)
- Selection W — Enter New Trigger Level, For Recording (0-128)
- Selection E — Select 'Freerun' Mode
- Selection - — Toggle Record/Play Modes (In Record Mode, left key in pair starts recording)
- <- -> — Change Sound Direction

MENU 4: MUSICAL KEYBOARD

- Selection Q — Return to Main Menu
- Selection W — Enter New Volume (0-15)
- Selection E — Enter New Mode (2-7)
- Selection R — Select 'Freerun' Mode
- Selection T — Enter New Record Rate (1-255)
- Selection Y — Enter New Trigger Level, For Recording (0-128)
- Selection - — Enable/Disable Record